

## Accessory Block Installation Instructions

ClearCreek provides a full line of accessory blocks to allow for easy finishing. Below are the standard Accessory Blocks. If you have a fixture that cannot be mounted using a standard Accessory Block, please contact your ClearCreek representative about a recommended solution.


NOTE: It is recommended that Accessories be installed prior to installation of Siding.

1. Fasten accessory to the wall with 2 ½" screws. All but the Low Profile Faucet block have predrilled holes.
2. Just prior to installing Siding around the block, place a ¼" bead of silicone around the perimeter of the block where the block meets the wall. When the siding is installed, the siding will be cut to fit around the block.
3. Apply clear Silicone Sealant to the outer joint between the siding and the block.

---


### Dryer Vent Block

The dryer vent cover (not included) can be attached to the block. The holes are offset so that they do not interfere with the 4" pipe.

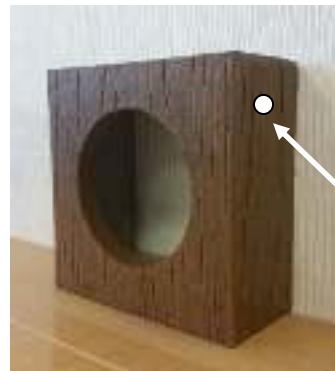

### Electrical Block

The receptacle and cover (not provided) can be attached to the block.

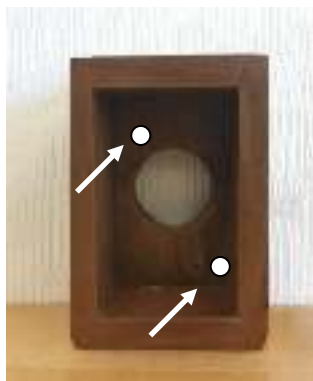


### **Light Block**

The light fixture (not included) can be attached to the block.



### **Faucet Block**

The faucet block is designed to wrap around the faucet pipe. Attach faucet flange to the block.

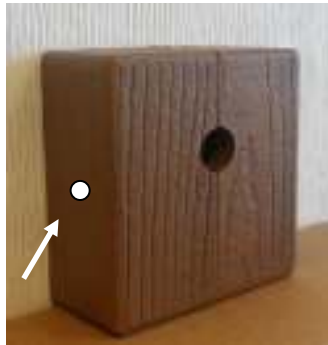

### **Low Profile Faucet Block**

This block is used when faucet will not come out from the building the required 3".

The faucet block is designed to wrap around the faucet pipe. Attach faucet and block using the holes on the faucet flange as a guide. Pre-drill holes with 1/8" drill bit.



Please contact ClearCreek Siding with any questions – 417-862-9511